

CONVEYOR AND PROCESS BELTS

TECHNICAL DATA SHEET

CODE	NA-26	ТҮРЕ	1M6 V5-V5
------	-------	------	-----------

	COMPOSITION	ON				
ng	Material	PVC 65 Sh.A (±5)				
	Thickness	0.50 mm <i>0.020 in.</i>				
Conveying surface	Surface pattern	Smooth				
Con	Colour	Green				
	Coefficient of friction	MF				
le SS	Material	Polyester (PET)				
Textile carcass	Plies no.	1				
F 8	Weft type	Rigid				
	Material	PVC 65 Sh.A (±5)				
Driving surface	Thickness	0.50 mm <i>0.020 in.</i>				
	Surface pattern	FM				
	Colour	Green				

TECHNICAL SPECIFICATIONS						
Total thickness			mm		0.07	in.
Weight			kg/m²		0.41	lbs./sq.ft
Elongation at 1%			N/mm		34.0	lbs./in.
Max. admissible pull		6	N/mm		34.0	lbs./in.
Temperature	min.	-10	°C		14	°F
resistance (1)	max.	60	°C		140	°F
(1) Use of the belt with limit values may reduce its life.						
Minimum radius / diameter (2)						
Knife edge minimum radius no						
■ Bending roller min. diameter				30	mm	1.18 in.
■ Counter-bending roller min. diameter			35	mm	1.38 in.	

 $^{\left(2\right)}$ The above mentioned values depend on the type of CHIORINO joint recommends Coefficient of friction on driving surface ■ Raw steel sheet ■ Laminated plastic/wood 0.40 [-] Steel roller Rubberized roller 0.60 [-] Max. production width 118 in. 3000 mm

SUITABLE FOR

Packaging



FEATURES		
Humidity influence	no	
Suitable to metal detector	no	
Permanent antistatic dynamically (UNI EN ISO 21179)	yes	
Static conductivity (UNI EN ISO 284)	no	
Conveying on skid bed	no	
Conveying on rollers	yes	
Conveying on skid bed on top and return	no	
Troughed conveying	no	
Swan neck conveying	no	
Inclined conveying	no	
Accumulators belts	no	
Curved conveyor	no	
Chemical resistances <u>link</u>		

COMPLIANCES

REACH EC 1907/2006 Regulation and Amendments EC 1935/2004 Regulation and Amendments EC 2023/2006 Regulation and Amendments EU 10/2011, 2017/752 Regulation and Amendments FDA (Food and Drug Administration)



NOTES

Issue: 24-07-2009 Last Update: 12-12-2018

DISCLAIMER

The information contained in this document describes the features of the CHIORINO product as tested in a laboratory environment at a temperature of +23 degrees °C at 50% relative humidity. It does not necessarily reflect the conditions of industrial use and it does not guarantee the product to be suitable for certain applications. The client remains liable for the proper selection and correct use of the CHIORINO product. CHIORINO cannot be held responsible should damages arise from the use of its products. Necessary alterations to this data can be made without prior notice.




CONVEYOR AND PROCESS BELTS

JOINING TECHNICAL DATA SHEET

CODE NA-26 TYPE 1M6 V5-V5

Recommended joining procedure SINGLE Z



Other joining methods can be used:

DIAGONAL SINGLE Z


Check our general catalogue to get further info on CHIORINO joining methods.

Pressing

Heating press P\PL\PLS


Press settings				
Upper platen temperature	175 °C			
Lower platen temperature	175 °C			
Temperature gauge setting	175 °C			
Curing time in press	3 min.			
Pressure	4 bar bar			
Film	TC-29 - Green PVC film			
Cement				

Use the KM330 thermometer to check the effective temperature inside the belt. Place the thermometer gauge as shown by the drawing at side.

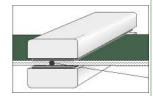

- 2. Allow the cooling cycle to be completed before removing the belt from the press.
- A reliable strength of the joint is ensured, providing that temperatures reached by the press are those indicated in the table at side.
 A periodical inspection of the thermostats is recommended, to make sure they function correctly.

Layout of components

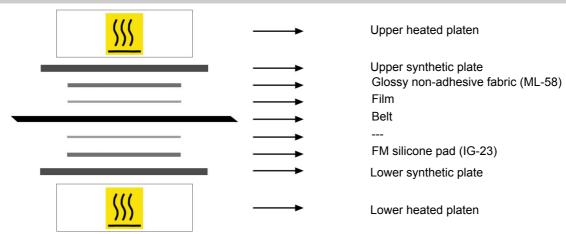

Notes

Issued: 14-07-2005 Last Update: 19-02-2019

DISCLAIMER

The information contained in this document describes the features of the CHIORINO product as tested in a laboratory environment at a temperature of +23 degrees °C at 50% relative humidity. It does not necessarily reflect the conditions of industrial use and it does not guarantee the product to be suitable for certain applications. The client remains liable for the proper selection and correct use of the CHIORINO product. CHIORINO cannot be held responsible should damages arise from the use of its products. Necessary alterations to this data can be made without prior notice.